



MDPV-30



PV Fuse holder

- | | |
|---------------------------------------|-----------------|
| • Maximum breaking capacity is 20kA | • Ue: 1000Vdc |
| • Replace the fuse operation is safer | • In:1-32A |
| • Indicator light optional | • Size: 10x38mm |



MDPV-30



PV Fuse holder + Fuse link gPV

- | | |
|---------------------------------------|-----------------|
| • Maximum breaking capacity is 20kA | • Ue: 1000Vdc |
| • Replace the fuse operation is safer | • In:1-32A |
| • Indicator light optional | • Size: 10x38mm |



MDPV-30



PV Fuse holder + Fuse link gPV

- | | |
|---------------------------------------|-----------------|
| • Maximum breaking capacity is 20kA | • Ue: 1000Vdc |
| • Replace the fuse operation is safer | • In:1-32A |
| • Indicator light optional | • Size: 10x38mm |



MDPV-30



PV Fuse holder + Fuse link gPV

- | | |
|---------------------------------------|-----------------|
| • Maximum breaking capacity is 20kA | • Ue: 1000Vdc |
| • Replace the fuse operation is safer | • In:1-32A |
| • Indicator light optional | • Size: 10x38mm |



MDPV-30



PV Fuse holder + Fuse link gPV

• Maximum breaking capacity is 20kA	• Ue: 1000Vdc
• Replace the fuse operation is safer	• In:1-32A
• Indicator light optional	• Size: 10x38mm



MDPV-32



PV Fuse holder + Fuse Link gPV

• Maximum breaking capacity is 20kA	• Ue: 1500Vdc
• Replace the fuse operation is safer	• In: 1-32A
• Indicator light optional	• Size: 10x65mm/10x85mm



MDPV-32



PV Fuse holder + Fuse Link gPV

• Maximum breaking capacity is 20kA	• Ue: 1500Vdc
• Replace the fuse operation is safer	• In: 1-32A
• Indicator light optional	• Size: 10x65mm/10x85mm